

Modulating RobustLine rotary actuator failsafe and extended functionalities for adjusting dampers in technical building installations.

- Air damper size up to approx. 1.2 m²
- Torque motor 6 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V
- Position feedback 2...10 V
- Running time motor 4 s

• Optimum protection against corrosion and chemical influences, UV radiation, damp and condensation

Technical data



Electrical data	Nominal voltage	AC/DC 24 V		
	Nominal voltage frequency	50/60 Hz		
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V		
	Power consumption in operation	11 W		
	Power consumption in rest position	3 W		
	Power consumption for wire sizing	22 VA		
	Connection supply / control	Cable 1 m, 4 x 0.75 mm ² (halogen-free)		
	Parallel operation	Yes (note the performance data)		
Functional data	Torque motor	6 Nm		
	Operating range Y	210 V		
	Input Impedance	100 kΩ		
	Position feedback U	210 V		
	Position feedback U note	Max. 0.5 mA		
	Setting fail-safe position	0100%, adjustable in increments of 10% (POP rotary knob on 0 corresponds to left end stop)		
	Bridging time (PF)	0 s		
	Position accuracy	±5%		
	Direction of motion motor	selectable with switch 0/1		
	Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) /		
		1 (cw rotation)		
	Direction of motion fail-safe	selectable with switch 0100%		
	Manual override	with push-button, can be locked		
	Angle of rotation	Max. 95°		
	Angle of rotation note	can be limited on both sides with adjustable mechanical end stops		
	Minimum angle of rotation	Min. 30°		
	Running time motor	4 s / 90°		
	Running time fail-safe	4 s / 90°		
	Adaptation setting range	manual (automatic on first power-up)		
	Sound power level, motor	60 dB(A)		
	Sound power level, fail-safe	60 dB(A)		
	Mechanical interface	Universal shaft clamp 820 mm		
	Position indication	Mechanically, pluggable		
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)		
	Power source UL	Class 2 Supply		
	Degree of protection IEC/EN	IP66/67		
	Degree of protection NEMA/UL	NEMA 4X		
	Enclosure	UL Enclosure Type 4X		
	EMC	CE according to 2014/30/EU		



	Technical data sheet	NKQ24P-SR
data	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	UL Approval CULus according to UL60730-1A, UI and CAN/CSA E60730-1 The UL marking on the actuator de the production site, the device is U	
	Mode of operation	in any case Type 1.AA
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	4
	Ambient humidity	Max. 100% RH
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free

1.9 kg

POP = Power off position / fail-safe position PF = Power fail delay time / bridging time

systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

· This device has been designed for use in stationary heating, ventilation and air-conditioning

- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- Junction boxes must at least correspond with enclosure IP degree of protection!
- The cover of the protective housing may be opened for adjustment and servicing. When it is closed afterwards, the housing must seal tight (see installation instructions).
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The cables must not be removed from the device installed in the interior.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The information on chemical resistance refers to laboratory tests with raw materials and finished products and to trials in the field in the areas of application indicated.
- The materials used may be subjected to external influences (temperature, pressure, constructional fixture, effect of chemical substances, etc.), which cannot be simulated in laboratory tests or field trials.
- Self adaptation is necessary when the system is commissioned and after each adjustment of the angle of rotation (press the adaptation push-button once).
- The information regarding areas of application and resistance can therefore only serve as a guideline. In case of doubt, we definitely recommend that you carry out a test. This information does not imply any legal entitlement. Belimo will not be held liable and will provide no warranty. The chemical or mechanical resistance of the materials used is not alone sufficient for judging the suitability of a product. Regulations pertaining to combustible liquids such as solvents etc. must be taken into account with special reference to explosion protection.
- Flexible metallic cable conduits or threaded cable conduits of equal value are to be used for UL (NEMA) Type 4X applications.
- When used under high UV loads, e.g. extreme sunlight, the use of flexible metallic or equivalent cable conduits is recommended.

Safety notes

Weight


Terms

Weight

Abbreviations



Fields of application	The actuator is pa	articularly suit	table for utilis	ation in outdo	oor application	ns and is prote	ected
against the following weather conditions:							
	- Wood drying - Animal breeding						
	- Food processing						
	- Agriculture		b b c c c c c				
	- Indoor swimmir - Rooftop ventilat						
	- General outdooi	applications					
	- Alternating clim - Laboratories	ate					
Resistances	Noxious gas test		0 (Erauphofer	Institut ICT /			
Resistances	Salt fog spray tes						
	Ammoniac test D						
	Climate test IEC60 Disinfectant (anin						
	UV Test (Solar rac				l 60068-2-63 (Quinel / Zug C	H)
Used materials	Actuator housing polypropylene (PP)						
	Cable glands / hollow shaft polyamide (PA)						
	Connecting cable FRNC Clamp / screws in general Steel 1.4404						
	Seals EPDM Form fit insert aluminium anodised						
	Form fit insert alu	iminium anoc	dised				
Mode of operation	The actuator moves the damper to the desired operating position at the same time as the integrated capacitors are charged. Interrupting the supply voltage causes the damper to be						
	rotated back into the fail-safe position by means of stored electrical energy.				i to be		
	The actuator is connected with a standard control signal of 010 V and drives to the position						
	defined by the control signal. Measuring voltage U serves for the electrical display of the damper position 0100% and as control signal for other actuators.						
Pre-charging time (start up)	The capacitor actuators require a pre-charging time. This time is used for charging the capacitors up to a usable voltage level. This ensures that, in the event of a power failure, the						
	actuator can move at any time from its current position into the preset fail-safe position. The						
	duration of the pre-charging time depends mainly on how long the power was interrupted.				upted.		
	Typical pre-charging times						
	20						r ²⁰
	[s]						[s]

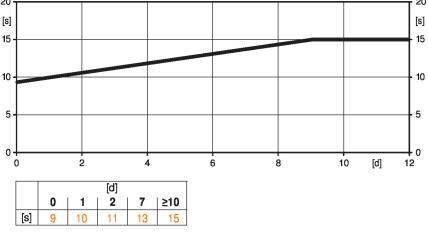

[d] = Electricity interruption in days [s] = Pre-charging time in seconds PF[s] = Bridging time

Delivery condition (capacitors)

Setting fail-safe position (POP)

The actuator is completely discharged after delivery from the factory, which is why the actuator requires approximately 15 s pre-charging time before initial commissioning in order to bring the capacitors up to the required voltage level.

The rotary knob fail-safe position can be used to adjust the desired fail-safe position 0...100% in 10% increments. The rotary knob always refers to the adapted angle of rotation range. In the event of a power failure, the actuator will move into the selected fail-safe position.



Simple direct mounting	Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti- rotation device to prevent the actuator from rotating.
Manual override	Manual control with push-button possible - temporary. The gear train is disengaged and the actuator decoupled for as long as the button is pressed.
Adjustable angle of rotation	Adjustable angle of rotation with mechanical end stops. A minimum permissible angle of rotation of 30° must be allowed for.
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
Home position	The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.
	The detection of the mechanical end stops enables a gentle approach to the end positions, thus protecting the actuator mechanics.
	The actuator then moves into the position defined by the control signal.
Adaptation and synchronisation	An adaptation can be triggered manually by pressing the "Adaptation" button. Both mechanical end stops are detected during the adaptation (entire setting range).
Setting direction of motion	When actuated, the direction of the rotation switch changes the running direction in normal operation. The direction of the rotation switch has no influence on the fail-safe position which has been set.
Accessories	

Electrical accessories	Description	Туре
	Signal converter voltage/current 100 kΩ Supply AC/DC 24 V	Z-UIC
	Positioner for wall mounting	SGA24
	Positioner for built-in mounting	SGE24
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	CRP24-B1

 
Electrical installation




Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

Wiring diagrams



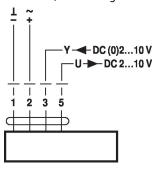


Cable colours: 1 = black 2 = red 3 = white

5 = orange




Parallel operation

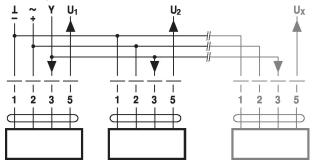

Notes

• A maximum of eight actuators can be connected in parallel. • Parallel operation is permitted only on non-connected axes. • Do not fail to observe performance data with parallel operation.

Operating controls and indicators

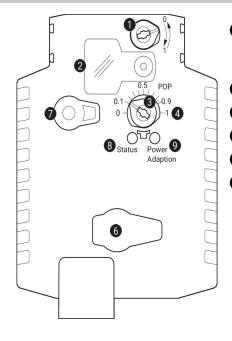

1 Direction of rotation switch

Switch over:

- 2 Cover, POP button
- **3** POP button
- **4** Scale for manual adjustment
- (no function) 6

Manual override button 7

Press button: Release button:

LED displays

yellow 8	green 🥑	Meaning / function
Off	On	Operation OK
Off	Flashing	POP function active
On	Off	Fault
Off	Off	Not in operation
On	On	Adaptation process active

Gear train engages, standard mode


Gear train disengages, motor stops, manual override possible

Direction of rotation changes




9 Push-button (LED green)

Press button: Triggers angle of rotation adaptation, followed by standard mode

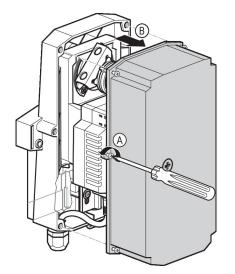



Setting emergency setting position (POP)

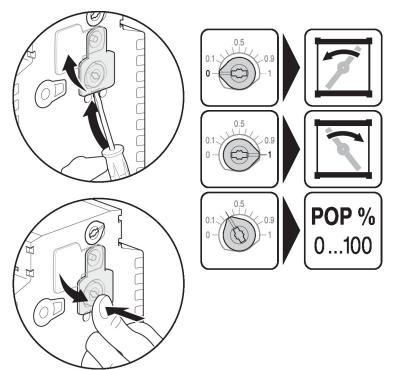


Dimensions

Spindle length

	-
!	2058


Clamping range

OI		
820	814	1020

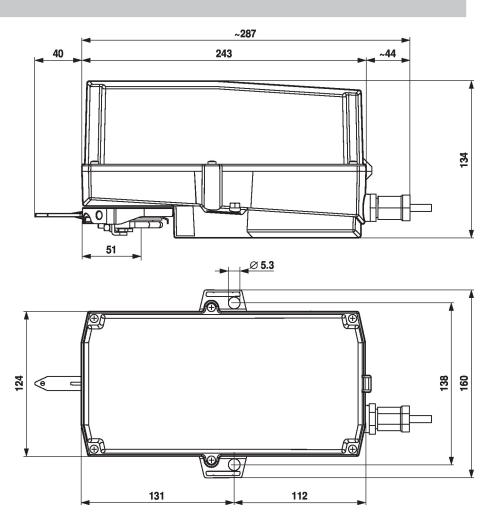




71355-00001.D

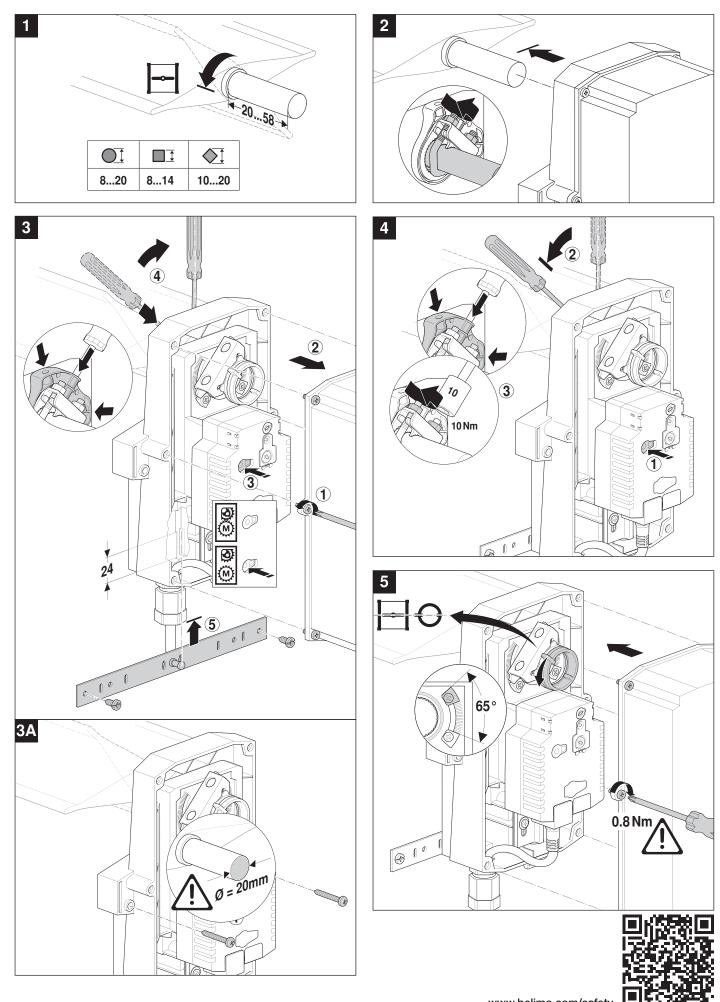

www.belimo.com/safety



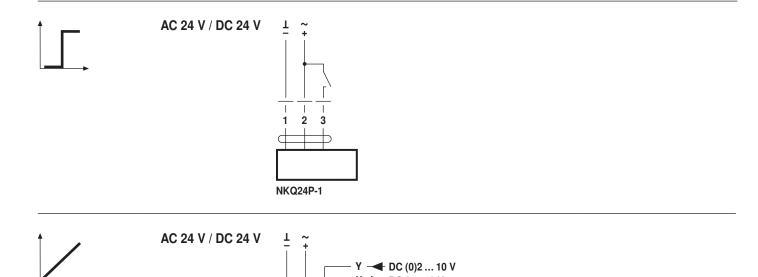

U - DC 2 ... 10 V

| | 2 3

NKQ24P-SR NKQ24P-MF

1 5

L

1 \subset

SALES CONTACT



www.airmax-hvac.com



080-614-4944, 063-268-8080



@airmax (Line Official)



windcontrol.info@gmail.com

