

# InMax ¼ turn actuators – size S

Electrical rotary actuators for use in safe areas

On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension

5/10 Nm, 15/30 Nm without and 5/10 Nm, 15 Nm with safety operation (spring return)

|                   |
|-------------------|
| InMax - ...       |
| InMax - ... - F   |
| InMax - ... - S   |
| InMax - ... - SF  |
| InMax - ... - CTS |
| InMax - ... - VAS |

Subject to change!

**Compact. Easy installation. Universal. Cost effective. Safe.**

| Type              | Torque                                                                                                  | Supply          | Motor running time           | Spring return | Control mode   | Feedback          | Wiring diagram |
|-------------------|---------------------------------------------------------------------------------------------------------|-----------------|------------------------------|---------------|----------------|-------------------|----------------|
| InMax- 5.10       | 5 / 10 Nm                                                                                               | 24...240 VAC/DC | 3 / 15 / 30 / 60 / 120 s/90° | –             | On-off, 3-pos. | –                 | SB 1.0         |
| InMax-15.30       | 15 / 30 Nm                                                                                              | 24...240 VAC/DC | 3 / 15 / 30 / 60 / 120 s/90° | –             | On-off, 3-pos. | –                 | SB 1.0         |
| InMax- 5.10 - F   | 5 / 10 Nm                                                                                               | 24...240 VAC/DC | 3 / 15 / 30 / 60 / 120 s/90° | 3 or 10 s/90° | On-off, 3-pos. | –                 | SB 2.0/2.1     |
| InMax- 15 - F     | 15 Nm                                                                                                   | 24...240 VAC/DC | 3 / 15 / 30 / 60 / 120 s/90° | 3 or 10 s/90° | On-off, 3-pos. | –                 | SB 2.0/2.1     |
| InMax- ... - S/SF | Types as above with 2 integrated, potential free auxilliary switches, 5° and 85° angle of rotation      |                 |                              |               |                | 2 × aux. switches | SB 3.0         |
| InMax- ... - CTS  | Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated) |                 |                              |               |                |                   |                |
| InMax- ... - VAS  | Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)   |                 |                              |               |                |                   |                |

## Product views and applications


Safety damper



Ball valve



Throttle valve



## Description

The InMax actuators are a revolution for safety, control and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants.

IP66 protection, small dimensions, only 3,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques as well as spring return times, according to the actuator type, are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected and self locking.

...Max-...F actuators are equipped with spring return fail safe function. Standard shaft connection is a double square direct coupling with 12 × 12 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

## Highlights

- Industrial use
- Universal supply unit from 24...240 VAC/DC
- 5 different motor running times 3–15–30–60–120 s/90°, adjustable on site
- 2 different spring return running times ~ 3–10 s/90°, selectable on site
- On-off and 3-pos. control with or without spring return function
- 5–10–15–30 Nm actuators in the same housing size
- 100 % overload protected and self locking
- Compact design and small dimension (L × W × H = 210 × 95 × 80 mm)
- Direct coupling to the damper shaft with double square connection 12 × 12 mm
- 95° angle of rotation inclusive 5° pretension
- Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- IP66 protection
- Simple manual override included + preparation for comfortable manual override
- Gear made of stainless steel and sinter metal
- Weight only ~ 3,5 kg
- Integrated heater for ambient temperatures down to –40 °C
- Integrated safety temperature sensor
- Integrated equipment for manual adjustment (push button, lamp, switch)
- Preparation for adaptable and adjustable auxiliary switches type ...Switch
- Wide range of accessories

| Technical data                   | InMax- 5.10                                                                                                                                                                      | InMax- 15.30                  | InMax- 5.10 -F                                         | InMax- 15 -F    |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|--------------------------------------------------------|-----------------|
| Torque motor (min.)              | 5 / 10 Nm selectable on site                                                                                                                                                     | 15 / 30 Nm selectable on site | 5 / 10 Nm selectable on site                           | 15 Nm           |
| Torque spring (F)                | –                                                                                                                                                                                | –                             | min. 10 Nm                                             | min. 15 Nm      |
| Torque blockade                  | In blockade and end positions torques are higher than above specified torques for motor and spring.                                                                              |                               |                                                        |                 |
| Dimensioning of external load    | Upon spring return the external load should be max. 80 % of torque spring (F), but min. 3 Nm                                                                                     |                               |                                                        |                 |
| Supply voltage / frequency       | 24...240 VAC/DC ± 10 %, self adaptable, frequency 50...60 Hz ± 20 %                                                                                                              |                               |                                                        |                 |
| Power consumption                | max. starting currents see ❶Extra information (in acc. with voltage, $I_{start} >> I_{rated}$ ), approx. 5 W holding power, approx. 16 W for heater                              |                               |                                                        |                 |
| Protection class                 | Class I (grounded)                                                                                                                                                               |                               |                                                        |                 |
| Angle of rotation and indication | 95° incl. ~ 5° pretension, mechanical value indication                                                                                                                           |                               |                                                        |                 |
| Working direction                | Selectable by left/right mounting to the damper/valve shaft                                                                                                                      |                               |                                                        |                 |
| Motor running times              | 3 / 15 / 30 / 60 / 120 s/90° selectable on site                                                                                                                                  |                               |                                                        |                 |
| 3 sec. mode – motor              | In acc. with the supply voltage and external torque 3 to 4 s/90° angle of rotation                                                                                               |                               |                                                        |                 |
| Motor                            | Brushless DC motor                                                                                                                                                               |                               |                                                        |                 |
| Control mode                     | On-off and 3-pos. in acc. with wiring, selectable on site                                                                                                                        |                               |                                                        |                 |
| Spring return (F)                | –                                                                                                                                                                                | –                             | spring return upon voltage interruption                |                 |
| Spring return response time      | –                                                                                                                                                                                | –                             | up to 1 sec. after voltage interruption                |                 |
| Spring return running time (F)   | –                                                                                                                                                                                | –                             | ~ 3 or 10 s/90° selectable on site                     |                 |
| 3 sec. mode – spring return      | –                                                                                                                                                                                | –                             | ~ 3 to 4 s/90° angle of rotation acc. to external load |                 |
| Safety operations at 10 sec. (F) | –                                                                                                                                                                                | –                             | min. 10,000 acc. to construction of damper and ambient |                 |
| at 3 sec. (F)                    | –                                                                                                                                                                                | –                             | min. 1,000 acc. to construction of damper and ambient  |                 |
| Auxiliary switches               | ...-S, ...-SF 2 integrated auxiliary switches, switching at 5° and 85° angle of rotation, potential free. Grid fuse-protection is recommended!                                   |                               |                                                        |                 |
|                                  | $U_{max}/I_{max}$ AC = 250 V/5 A; $U_{min}$ AC/DC = 5 V; After one-time operation with $U > 24$ V AC/DC or $I > 100$ mA: $U_{min}$ AC/DC = 12 V                                  |                               |                                                        |                 |
|                                  | $U_{max}/I_{max}$ DC = 48 V/1 A; $I_{min}$ AC/DC = 5 mA; $I_{min}$ AC/DC = 100 mA                                                                                                |                               |                                                        |                 |
| Axle of the actuator             | Double square 12 × 12 mm, direct coupling, 100 % overload protected and self locking up to 15 Nm                                                                                 |                               |                                                        |                 |
| Electrical connection            | Cable ~ 1 m, wire cross section 0.5 mm², equipotential bonding 4 mm². Connections require a terminal box!                                                                        |                               |                                                        |                 |
| Diameter of cable                | ~ Ø 7.1 mm                                                                                                                                                                       | ~ Ø 7.1 mm                    | ~ Ø 7.4 mm                                             | ~ Ø 7.4 mm      |
|                                  | 2 cables in the versions ...-S and ...-SF (~ Ø ... + 7.4 mm)                                                                                                                     |                               |                                                        |                 |
| Cable gland                      | M16 × 1.5 mm                                                                                                                                                                     |                               |                                                        |                 |
| Manual override                  | Use delivered socket wrench, max. 4 Nm                                                                                                                                           |                               |                                                        |                 |
| Heater                           | Integrated, controlled heater for ambient temperature down to –40 °C                                                                                                             |                               |                                                        |                 |
| Housing material                 | Aluminium die-cast housing, coated. Optional with seawater resistant coating (...-CTS) or stainless steel housing, № 1.4581 / UNS-J92900 / similar AISI 316Nb (...-VAS)          |                               |                                                        |                 |
| Dimensions (L × W × H)           | 210 × 95 × 80 mm, for diagrams see ❶Extra information                                                                                                                            |                               |                                                        |                 |
| Weight                           | ~ 3,5 kg aluminium housing, stainless steel ~ 7 kg                                                                                                                               |                               |                                                        |                 |
| Ambients                         | Storage temperature –40...+70 °C, working temperature –40...+50 °C                                                                                                               |                               |                                                        |                 |
| Humidity                         | 0...90 % rH, non condensing                                                                                                                                                      |                               |                                                        |                 |
| Operating 3 sec. motor run time  | In 3 s mode the motor will work only after 1 minute of voltage supply. While open/close operation (open voltage supply and shut it down) motor works only with speed of 15 s/90° |                               |                                                        |                 |
| ≥ 15 sec. motor run time         | At 15 / 30 / 60 / 120 s 100 % of ED is permitted (ED = duty cycle)                                                                                                               |                               |                                                        |                 |
| Wiring diagrams                  | SB 1.0                                                                                                                                                                           | SB 1.0                        | SB 2.0 / 2.1                                           | SB 2.0 / 2.1    |
| Scope of delivery                | Actuator, 4 screws M4 × 100 mm, 4 nuts M4, Allen key for simple manual override                                                                                                  |                               |                                                        |                 |
| Parameter at delivery            | 5 Nm, 30 s/90°                                                                                                                                                                   | 15 Nm, 30 s/90°               | 5 Nm, 30 s/90°                                         | 15 Nm, 30 s/90° |

## Approbations

|                       |                            |
|-----------------------|----------------------------|
| CE identification     | CE                         |
| EMC directive         | 2014/30/EU                 |
| Low voltage directive | 2014/35/EU                 |
| Enclosure protection  | IP66 in acc. with EN 60529 |

## Special options

... -CTS


... -VAS

### Electrical connection

All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage!  
The safety operation of the spring return function works if the supply voltage is cut.  
For electrical connection a terminal box is required (e.g. InBox).  
An over-current protection fuse < 10 A has to be provided by installer.  
Note: the initial current is appr. 2 A for 1 second.  
Integrated auxiliary switches signal the rotation angle's position.  $U_{min}$  and  $I_{min}$  change once the switches were operated with higher voltage or current.

### Wiring diagram InMax- ... (without spring return)

#### On-off / 3-pos. SB 1.0

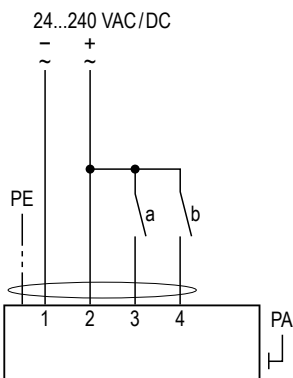
**Attention**


During commissioning apply a self adjustment drive.

Regard duty cycle at motor running times!

Never use spring return actuators without external load.


### Wiring diagram InMax- ... -F (with spring return)

#### On-off / 3-pos. SB 2.0

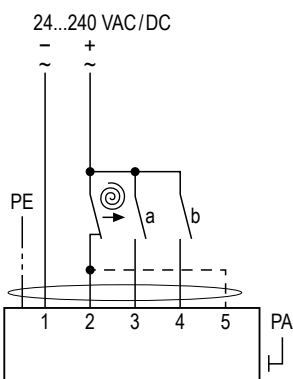

Spring return in ~ 10 s = Standard wiring  
Spring return in ~ 3 s = Additional wiring on terminal 5


#### On-off (1 wire) SB 2.1

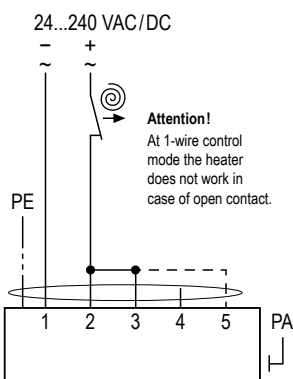

Spring return in ~ 10 s = Standard wiring  
Spring return in ~ 3 s = Additional wiring on terminal 5

### Wiring diagram InMax- ... -S and ... -SF

#### Wiring of integrated auxiliary switches SB 3.0

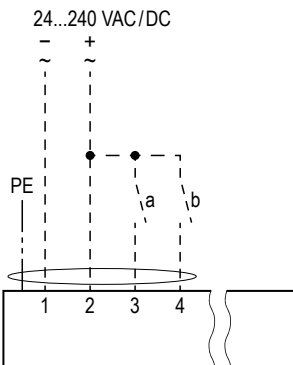


Wiring of actuator acc. to type and application see diagrams above

Integrated auxiliary switches, Grid fuse-protection recommended.

min. max.  
 $U < 90 \text{ V AC/DC}$  2 AT 10 AT  
 $U > 90 \text{ V AC/DC}$  5 AT 10 AT

< 5° > 85°

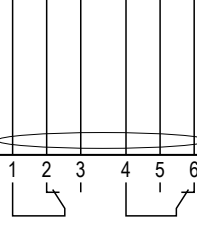


Wiring of the integrated, potential free auxiliary switches

### Parameters, adjustments and failure indication

#### Switch – Push button – Lamp for adjustment (behind the blanking plug)

10-position switch (S)  
Push button (T)  
3-colour LED

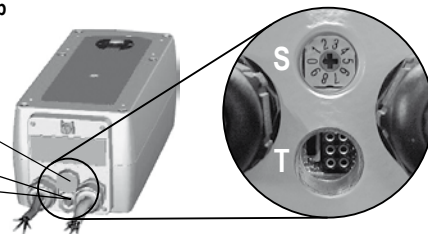

#### Parameter selection

Example:  
InMax-15.30

Requested parameter:  
Torque 30 Nm  
Motor running time 30 s/90°

Result:  
Switch position 07

| Type          | Torques                |
|---------------|------------------------|
| InMax- 5.10   | 5 Nm 10 Nm             |
| InMax- 15.30  | 15 Nm 30 Nm            |
| InMax- 5.10-F | 5 Nm 10 Nm             |
| InMax- 15-F   | 15 Nm 30 Nm            |
| Running times | Position of switch (S) |
| 3 s/90°       | 00 05                  |
| 15 s/90°      | 01 06                  |
| 30 s/90°      | 02 07                  |
| 60 s/90°      | 03 08                  |
| 120 s/90°     | 04 09                  |

### Functions, adjustments and parameters

#### A) Self adjustment of angle of rotation

Turn switch (S) to position 02 (low torque) or 07 (high torque). Press button (T) for a minimum of 3 seconds. The actuator drives to both end positions and detects the blocking positions. The LED flashes GREEN during adjustment.  
The adjustment takes about 60 seconds (30 sec. "On", 30 sec. "Off").

#### B) Selecting motor running time and torque

Adjust parameters only if actuator is in idle state or without applied potential.

Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator's next operation.

#### C) Selecting spring return time

Spring return time is selected by wiring.

#### D) Additional information for control in 3-pos. operation

a closed, b open = direction I a and b closed = motor doesn't work  
b closed, a open = direction II a and b open = motor doesn't work

The rotation direction (I and II) depends on left/right mounting of the actuator to the damper. To reverse the rotation direction (by motor) exchange the electrical wiring of terminal 3 and 4.

### Installation



Auxiliary switches \*  
see Technical data

Supply \*  
24...240 VAC/DC ± 10 %

\* electrical wiring see diagrams

- Do not open the cover when circuits are live
- Connect potential earth
- Close all openings to ensure enclosure protection
- Clean only with damp cloth, avoid dust accumulation

## Important information for installation and operation

### A. Installation, commissioning, maintenance

All national and international standards, rules and regulations must be complied with. Apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired.

For electrical connection an terminal box is requested (e.g. InBox-...).

**Attention:** If the actuator is put out of operation all rules and regulations must be applied. You have to cut the supply voltage before opening a terminal box!

The cable of the actuator must be installed in a fixed position and protected against mechanical and thermal damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66. For outdoor installation a protective housing against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integrated heater. During commissioning apply a self adjustment drive.

Actuators are maintenance free. An annual inspection is recommended. Actuators must not be opened by the customer.

### B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

**Attention:** Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

### C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 12 x 12 mm. For round shafts adaptors/clamping connection (accessories, e.g. KB-S) are available. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

### D. Operation with 3 sec. motor running time

Note following:

1. The 3 sec. motor running time mode is only available in switch position 0 and 5 and at a constant supply voltage applied for a minimum of 1 minute on terminal 1 and 2.
2. The actuator opens at voltage on terminal 3 (resp. closes) and closes at voltage on terminal 4 (resp. opens) – depending on mounting position of the actuator.
3. The max. duty ratio is 10 % resp. 1 cycle/minute. Between two fully 3 sec. cycles in the same direction there must be a minimum intermission of 1 minute. Trying to run the actuator in the same direction in less than the required minimum of 1 minute the function will be blocked for the rest of the idle period. Later the release for the next cycle is made automatically by an internal timing relay.
4. Same function is applied on spring return actuators, fail safe operation is regarded same as a motor running cycle.
5. Trying to use the 1 wire On-off method in switch position 0 and 5, software changes the motor running time temporarily and automatically to 15 s/90° to protect the actuator for overheating due to uncontrolled duty ratio.

### E. 3-position control mode

...Max actuators are in the best way suitable for the 3-pos. operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ...Max actuators are protected via internal electronics. It ignores impulses < 0.5 s, the cyclic duration must be min. 0.5 s. At changing direction the pause is 1 s.

### F. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

### G. Operation at ambient temperatures below -20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to -40 °C ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

1. After mounting the actuator must be immediately electrically connected.
2. The heater switches on automatically when actuator reaches internally -20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
3. The adjustment options are only ensured after this heating up period.

### H. Excess temperatures

All actuators are protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversibly. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

### I. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

### J. Mechanical protection

Actuators must be operated with a minimum external load.

After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload.

During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a "gentle" blockade/stop.

### K. Loss of voltage

In switch position 00, 01 and 05, 06 (motor running times 3 sec. and 15 sec.) and after interrupted voltage the actuator (types 5.10 and 15.30 and ...-S) moves in OFF position then the actuators works regarding control signal.

## ❶ Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

## Special solutions and accessories

|               |                                                                                 |
|---------------|---------------------------------------------------------------------------------|
| ...-CTS       | Types in aluminium housing with seawater resistant coating, parts nickel-plated |
| ...-VAS       | Types in stainless steel housing, parts nickel-plated                           |
| Adaptions     | for dampers and valves on request                                               |
| InMax-...-S3  | Ambient temperature up to +60 °C, 110...240 VAC/DC, 25 % ED                     |
| InMax-...-S7  | Actuator shock approved up to 500 g                                             |
| InMax-...-S17 | Connection cable ~ 3 m                                                          |
| InMax-...-S36 | Actuator shock approved up to 500 g, connection cable ~ 3 m                     |

|           |                                                                        |
|-----------|------------------------------------------------------------------------|
| InBox-... | Terminal boxes                                                         |
| MKK-S     | Mounting bracket for boxes type ...Box-... directly on actuator        |
| InSwitch  | 2 external aux. switches, adjustable                                   |
| HV-S...   | Comfortable manual override for...Max actuators size S                 |
| KB-S      | Clamp for damper shafts Ø 10...20 mm and □ 10...16 mm                  |
| AR-12-xx  | Reduction part for 12 mm square connection to 11, 10, 9 or 8 mm shafts |
| Kit-S8    | Cable glands nickel-plated                                             |



## Extra information for ...Max actuators – size S

for optimization of planning, installation and initial startup for safe operation



### Assembly

- ▶ Dimensions, drill plate
- ▶ Control elements: switch – push buttons – LED
- ▶ Outdoor installation
- ▶ Mounting on air dampers (form-fit and force-fit)
- ▶ Mounting on fire dampers (form-fit)
- ▶ Mounting on butterfly valves and ball valves
- ▶ Mounting of terminal box ...Box and auxiliary switch ...Switch



### Electric



- ▶ Power supply design
- ▶ Line cross sections
- ▶ Problem treatment/error indication

Subject to change!

#### ▶ Dimensions



Dimensioning in mm

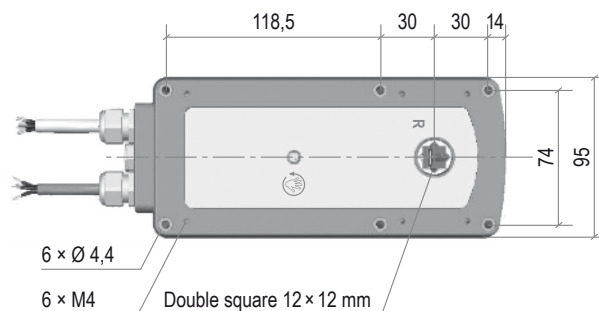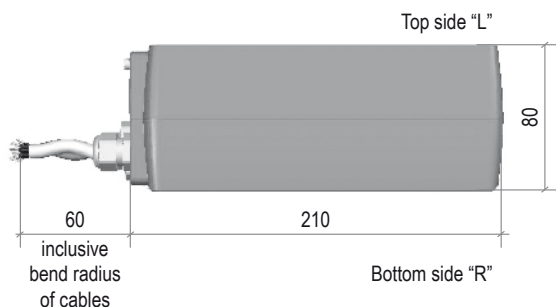


#### ▶ Control elements: switch – push button – LED



All actuators are equipped with a 10-position switch, a push button and a multicolour LED for calibration. These control elements are to be found cable-laterally behind the two middle sectioned dummy plugs. For operation these must be removed. The calibration can be achieved despite lining up power supply at the actuator. The explosion prevention is not impaired thereby. However, it has to be of great concern that the dummy plugs must be rescrewed in order to comply with the IP-protection class.

The operation of the switch and button has to be done by means of a small screwdriver. Force with strong pressure and/or rotation is to be avoided in any case, since otherwise control electronics can be damaged irreparably. Adjustments of torque and running time can be achieved also before mounting. The adjustment of angle of rotation can be started only with an outside load and accurate mounting.

Switch – Push button – Lamp  
for adjustment (behind the blanking plug)

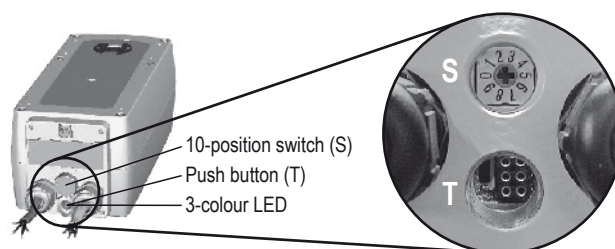


#### ▶ Outdoor installation



When mounting actuator outdoors it has to be certain that the actuator is protected against direct sun exposure (heat and UV!), rain and snow by employing an enclosure roof. Supply voltage is to be applied immediately after mounting in order to assure integrated heating at start.

Since actuators must have an internal temperature fuse, they may not be exposed to a too high temperature, neither at storage nor during operation. Otherwise the fuse could respond and switch off the actuator irreversibly.

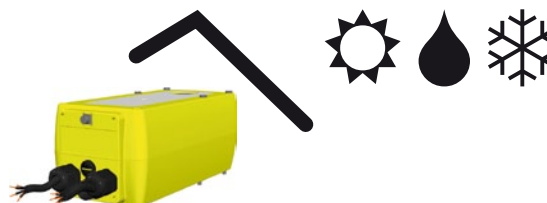

## ► Mounting of ...Max actuators



...Max actuators size S are equipped with a 12 × 12 mm (double square) shaft connection by default. The form-fitting shaft connection is the most secure connection between damper shaft and actuator because slipping or slipping through is avoided compared to the force-fit clamp-connection.

The actuator will be connected firmly to the damper or fixed to a mounting bracket by means of four screws M4 × 100 mm (scope of delivery).

For connection to round or square damper shafts smaller or larger than 12 × 12 mm a tensionally locked connection can be realized with the mounting clamp "KB-S" (optional accessory).

For square damper shafts 8 × 8 mm, 9 × 9 mm, 10 × 10 mm or 11 × 11 mm reducing bushes are also available.

The actuators are axially symmetric developed. In case of spring return function the safety position must be selected by turning the actuator to 180°.

Furthermore it is to be considered that the actuators have a total angle movement of approx. 95° in order to realize a pretension on the control element (damper or the like).

Therefore the actuator sits tilted on the damper shaft.

In order to adjust this and to induce pretension, the driving shaft has to be aligned mechanically over the hand-operated control socket "HV" when connecting to the damper shaft.

The socket wrench has to be turned **counterclockwise** when facing the actuator's "side R", facing "side L" turn manual override **clockwise**.



### Attention: Mount with appropriate safety precautions only!

- The drive shaft is self-locking and may only be mechanically adjusted either with the provided socket wrench or the optional accessory "HV-S" manual override (turn off power supply). External force applied to the shaft can lead to mechanical damage of the actuator!
- At the manual override counteracting forces occur when mounting spring return actuators. **Do NOT release manual override under spring tension!**

## ► Mounting on air dampers




### Form-fitted shaft connection – Mounting on square damper shaft

#### Mounting:

1. Affix tap holes M4 (in accordance with drill template) on the damper or to a mounting bracket.
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicularly to the damper before plugging actuator onto the damper shaft.
3. Plug actuator onto damper shaft and fix diagonally with 2 screws.
4. Remove the socket wrench.
5. Pivot and tighten the remaining screws.

#### Dimension of the damper shaft

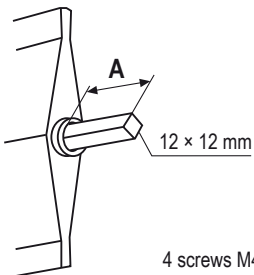


#### Length A

Measure A in acc. with indicator:

1. Actuator without indicator **A = no limit**
2. Actuator with indicator, no accessories **A < 65 mm**

4 screws M4 × 100 mm as well as a socket wrench are part of delivery.  
For square damper shafts 8 × 8 mm, 9 × 9 mm, 10 × 10 mm or 11 × 11 mm reducing bushes are available as optional accessories.

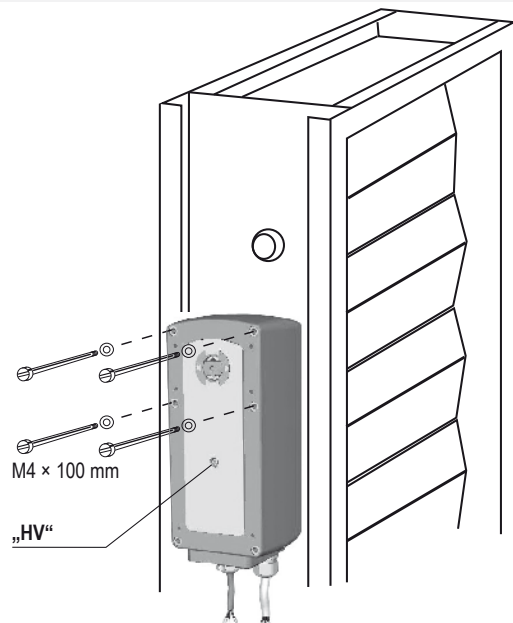


### Force-fitted shaft connection – Mounting of clamp "KB-S"

#### Mounting:


1. Insert mounting clamp into drive shaft and screw tightly from opposite side with the socket wrench.
2. Screw in two screws functioning as an anti-twist locking device.
3. Install mounting bracket at the damper.
4. Mount actuator on the damper shaft, adjust it in the mounting bracket and install it in such way that it can implement an oscillating motion for the reconciliation of the non-centric connection. Tighten the clamp with the wrench socket.

#### Round damper shafts

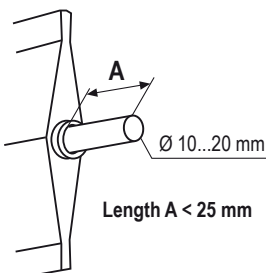


Length A < 25 mm

#### Square damper shafts

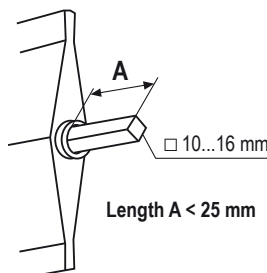

Length A < 25 mm

#### 1. Pre-assemble mounting clamp

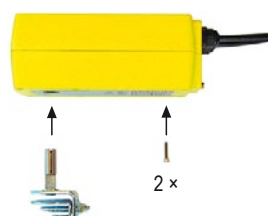

#### 2. Fixing



#### 3. Assemble mounting bracket



#### 4. Mounting to damper



## ► Mounting on fire dampers



ExMax-...-BF and RedMax-...-BF actuators integrate an intrinsically safe circuit in order to connect an ExPro-TT-... sensor which works like a temperature trigger. InMax-... and InPro-TT-... are for non hazardous areas.

### Mounting:

1. Affix tap holes M4 (in accordance with drill template) on the damper or to a mounting bracket
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicularly to the damper before plugging actuator onto the damper shaft
3. Plug actuator onto damper shaft and fix diagonally with 2 screws
4. Remove the socket wrench
5. Pivot and tighten the remaining screws
6. Mount temperature trigger ...Pro-TT-...
7. Mount terminal box (type ...Box-BF)
8. Plug sensor connector into actuator's socket



### Connection of safety temperature trigger ...Pro-TT-...



The temperature trigger is mounted directly to the duct or damper wall with pre-assembled tapping screws. The position of the safety elements must guarantee free air flow. ...Pro-TT-... is mounted to the actuator by means of quick fastener M12.

## ► Mounting to ball valves and butterfly valves





Actuators of size S are equipped by default with a 12 x 12 mm double square form-fitting shaft connection. For mounting to butterfly valves or ball valves a special mounting bracket in acc. with DIN EN ISO 5211 is required.

Since this standard provides only certain basic conditions there can be substantial geometrical differences between armatures which require a special adaption.

### Mounting to a ball valve

### Mounting to a butterfly valve

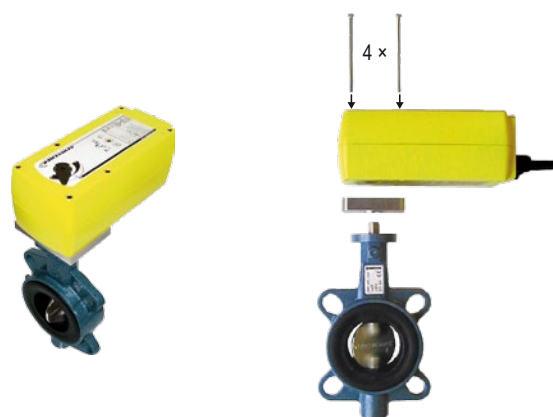
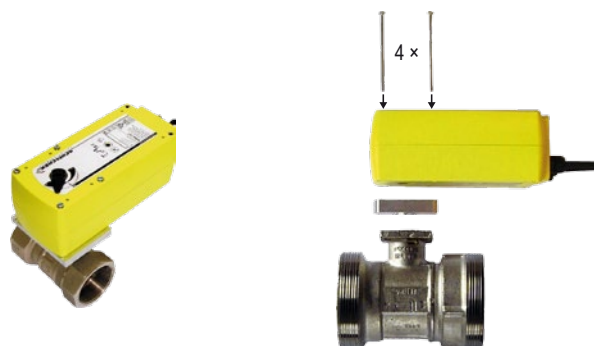


► Mounting of terminal boxes ...Box to actuator via mounting bracket MKK-S (accessory)




- A) Screw mounting bracket MKK-S with 4 screws to actuator
- B) Screw terminal box to mounting bracket

Mounting bracket can be mounted every 90°

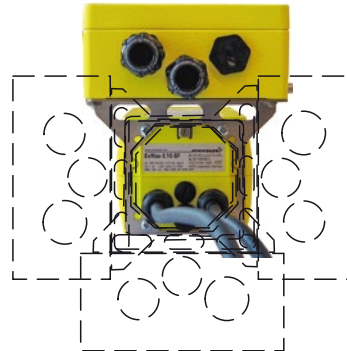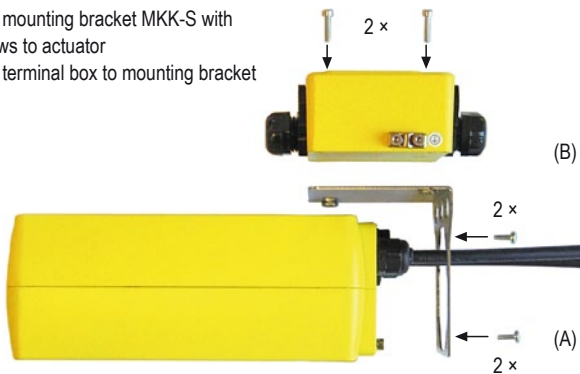

Terminal box mounted above the actuator

Terminal box mounted beside the actuator

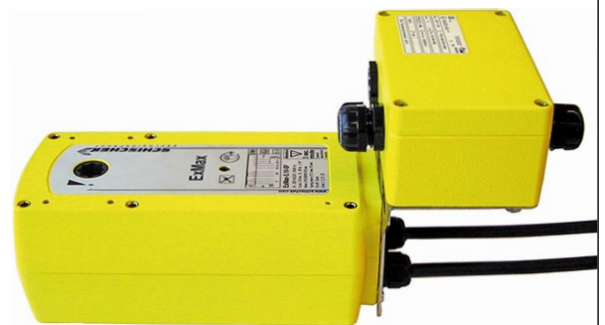


► Mounting of auxiliary switch ...Switch to actuator



- A) Place square connection part on actuator's shaft
- B) Mount ...Switch and fix it with screws

...Max with mounted ...Switch

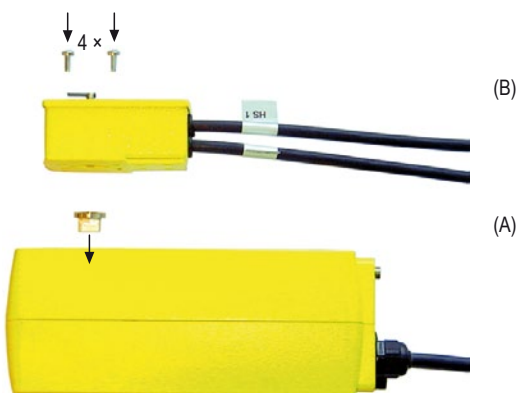


## ► Power input depending on supply voltage

The design of the on-site supply depends on the selected motor running time and selected supply voltage. Accompanying values are "about values" since there can be construction unit dispersions within electronics. The holding power is run time independently typical at ~ 5 W. The power consumption for the heater is ~ 16 W. In the heating phase the motor is not active!

The initial starting supply voltage required by the actuators power supply unit is ~ 2.0 A. The starting pulse takes about 1 sec. (please consider this while conceiving the cross section of the supply line). The power factor is between 0.8 and 0.5 in dependence of motor running time. A line protection should be min. 2 AT.

| Voltage  | Current              | Rated current in acc. with motor running time |        |        |        |        |
|----------|----------------------|-----------------------------------------------|--------|--------|--------|--------|
|          |                      | 3 / 7,5 s                                     | 15 s   | 30 s   | 60 s   | 120 s  |
| 24 V DC  | I <sub>Nominal</sub> | 4,70 A                                        | 1,30 A | 0,70 A | 0,60 A | 0,50 A |
| 120 V AC | I <sub>Nominal</sub> | 0,75 A                                        | 0,30 A | 0,25 A | 0,20 A | 0,17 A |
| 240 V AC | I <sub>Nominal</sub> | 0,37 A                                        | 0,15 A | 0,12 A | 0,10 A | 0,08 A |


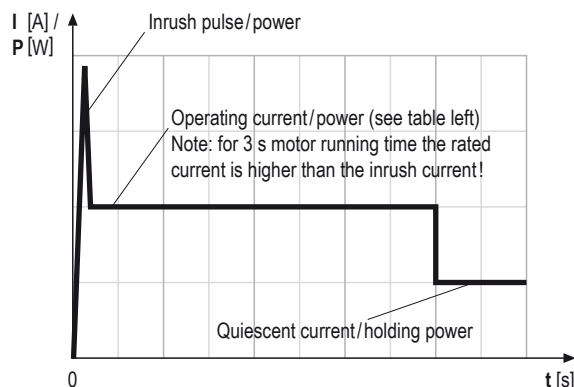


## ► Cross sections of the inlet line

On long distances between voltage supply and drive, voltage drops occur due to line resistances. As a consequence with 24 VAC/DC the actuator receives a too low tension and does not start. In order to prevent this the cross section of the inlet line is to be dimensioned accordingly.

The accompanying formulas allow the calculation of the necessary line cross section respectively maximal permitted conduit length respectively utilizing the existing line cross section.

Alternatively the secondary voltage can be increased by selecting a transformer.

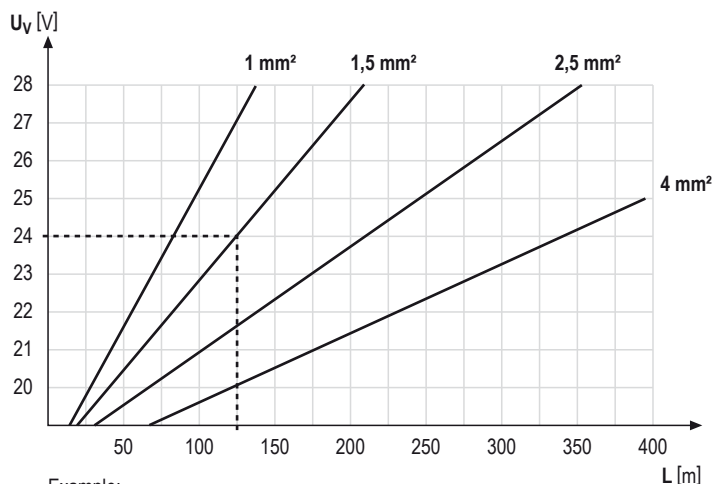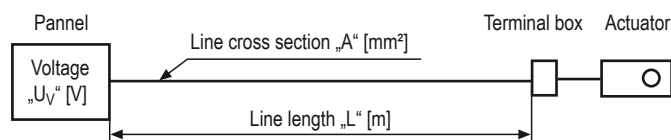

Example:  
24 V power supply with wire diameter 1,5 mm² = cable length 126 m

Required **cable cross section A** at existing cable length L

$$A = 0,0714 \times L : (U_V - 18 V)$$

Example: L = 250 m, U<sub>V</sub> = 30 V

Cross section A = 1,5 mm²

Maximum **cable length L** at existing cross section A

$$L = A \times (U_V - 18 V) : 0,0714$$

Example: A = 1,5 mm², U<sub>V</sub> = 24 V

Length of cable L = 126 m

For calculation following characteristics are essential:

U<sub>V</sub> = supply voltage [V]

A = line cross section [mm²]

L = conduit length [m]

Factor 0,0714 = drive specific factor [Vmm²/m]

(based on the electrical conductivity of electrolytic copper with a coefficient of 56 m/Ω mm²)



## ► Problem handling / Error indication



| Problem                                                                                                                               | Possible cause                                                                                                                                                                                                                                                                                                                                              | Course of action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01 Actuator does not work<br>LED does not light                                                                                       | <ul style="list-style-type: none"> <li>No power supply attached</li> <li>The actuator is operated at ambient temperature beyond specifications and the internal temperature fuse shuts down irreversibly</li> </ul>                                                                                                                                         | <ul style="list-style-type: none"> <li>Attach power supply and turn on</li> <li>Caused by inadmissible operation and for safety relevant reasons the actuator drove into an irreversible condition and must be exchanged. Accompanying new installation the ambient temperature has to be reduced accordingly</li> </ul>                                                                                                                                                                                                                                                     |
| 02 Actuator does not work<br>LED lights RED                                                                                           | <ul style="list-style-type: none"> <li>The actuator is operated at a too high ambient temperature and the internal temperature sensor responded</li> <li>...-BF actuators require a temperature trigger type ...Pro-TT or FireSafe</li> </ul>                                                                                                               | <ul style="list-style-type: none"> <li>Shut off actuator and let temperature decrease, reduce ambient temperature by suitable measures e.g. ventilation or other mounting position of the actuator</li> <li>Connect trigger, LED changes to GREEN, actuator is ready-to-operate</li> </ul>                                                                                                                                                                                                                                                                                   |
| 03 Actuator does not work<br>LED lights GREEN                                                                                         | <ul style="list-style-type: none"> <li>3-pos. control signal is wired on both entrances</li> <li>Required torque is greater than actuators torque</li> <li>Control signals are not attached or attached on a wrong conductor</li> <li>Actuator is incorrectly mounted and is blocked by an external stop unit</li> <li>Interchanged supply lines</li> </ul> | <ul style="list-style-type: none"> <li>Readjust / correct circuit</li> <li>Adjust a higher torque at the actuator if possible otherwise exchange for a type with higher torque</li> <li>Examine rule and adjusting signals and connect in accordance with diagram</li> <li>Dismount actuator and testdrive without load for operability. Then install actuator accordingly so that the power transmission of the actuator runs the armature/damper without external blockade or torsion</li> <li>Switch wires: 1 must be connected to (-, N) and wire 2 to (+, L)</li> </ul> |
| 04 Actuator does not work<br>LED is blinking RED                                                                                      | <ul style="list-style-type: none"> <li>The actuator has been mounted at temperatures &lt; -20 °C and did not reach its operating temperature of at least -20 °C</li> </ul>                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>Ensure that a constant voltage supply is applied on conductor 1–2</li> <li>Wait until the required operating temperature is achieved by the actuators internal heating system. The actuator will start operating independently</li> </ul>                                                                                                                                                                                                                                                                                             |
| 05 Spring return function is 10 s/90°, however should amount to 3 s/90°                                                               | <ul style="list-style-type: none"> <li>Bridge 2–5 is not established</li> </ul>                                                                                                                                                                                                                                                                             | <ul style="list-style-type: none"> <li>Bridge conductor 2 of the constant voltage supply with conductor 5</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| 06 Spring return function is 3 s/90°, however should amount to 10 s/90°                                                               | <ul style="list-style-type: none"> <li>Bridge 2–5 is established</li> </ul>                                                                                                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>Disconnect bridge</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 07 Actuator does not start after more than 2 briefly following adjusting functions were set in 3-sec. mode                            | <ul style="list-style-type: none"> <li>The maximal permissible cyclic duration of 10 % ED (ED = duty cycle) in 3-sec. mode was not complied with, the actuator is in a safety disconnection mode</li> </ul>                                                                                                                                                 | <ul style="list-style-type: none"> <li>Wait approx. 1 minute until internal electronics cool down to operating temperature</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 08 Y-actuators in 3-pos. mode cannot gear into intermediate positions                                                                 | <ul style="list-style-type: none"> <li>The conversion of constant mode to 3-pos. mode was not set</li> </ul>                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>Recalibrate the actuator in accordance with assembly instructions</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 09 Actuator sits diagonally on square damper shaft                                                                                    | <ul style="list-style-type: none"> <li>Actuators have an angle of rotation of 95° incl. 5° pretension. While assembling the pre-load was not considered</li> </ul>                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>Dismount actuator off the damper, use enclosed socket wrench to draw up approx. 5° over the hand operated control device before remounting on the damper shaft. Consider assembly instructions!</li> </ul>                                                                                                                                                                                                                                                                                                                            |
| 10 Actuator is installed force-fit with shaft connection KB-S onto damper shaft and drives only partially or not at all               | <ul style="list-style-type: none"> <li>Provided that the electrical basic conditions specified above are fulfilled, the anti-twist plate could be installed in a way that the actuator blocks itself due to the twisted and off-centered shaft connection and therefore interlocks</li> </ul>                                                               | <ul style="list-style-type: none"> <li>Loosen the anti-twist plate and remount so the actuator can implement an easy oscillating motion over its angle of rotation</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                |
| 11 A modulating Y-actuator working with reduced angle of rotation, reaches its end positions already at > 0 V/4 mA resp. < 10 V/20 mA | <ul style="list-style-type: none"> <li>At start up no self-adjustment of angle of rotation was accomplished</li> </ul>                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>Accomplish self adjustment of angle of rotation in accordance with assembly instruction</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 12 LED flashes irregularly and actuator does not work                                                                                 | <ul style="list-style-type: none"> <li>Actuator does not receive sufficient supply voltage</li> <li>Cable too long, voltage drop in the supply line too large</li> </ul>                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>Increase line cross section or power supply</li> <li>Increase line cross section or power supply</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                           |

# SALES CONTACT



[www.airmax-hvac.com](http://www.airmax-hvac.com)



080-614-4944, 063-268-8080



@airmax (Line Official)



[windcontrol.info@gmail.com](mailto:windcontrol.info@gmail.com)



Address

เลขที่ 56/392 หมู่ที่ 12  
ตำบลศีรษะจรเข้น้อย  
อำเภอบางเสาธง  
จังหวัดสมุทรปราการ  
10540

