

On/Off, Spring Return, AC 120 V, Auxiliary Switch


- Torque 2 Nm /
- Nominal voltage AC 120 V
- Control On/Off



Technical data sheet









Technical data		
Electrical data	Nominal voltage	AC 120 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 96132 V
	Power consumption in operation	2 W, 3.5 VA
	Power consumption in rest position	1.5 W, 2.5 VA
	Auxiliary switch	2 x SPST, 3 A resistive (0.5 A inductive) @ AC 250 V, one set at 10°, one set at 80°
	Switching capacity auxiliary switch	3 A resistive (0.5 A inductive) @ AC 250 V
	Electrical Connection	(2) 18 GA appliance cables, 1 m, with 1/2" conduit connectors
	Overload Protection	electronic throughout 095° rotation
	Electrical Protection	actuators are double insulated
Functional data	Torque motor	18 in-lb [2 Nm]
	Direction of motion motor	selectable by ccw/cw mounting
	Direction of motion fail-safe	reversible with cw/ccw mounting
	Angle of rotation	95°
	Running Time (Motor)	75 s / 90°
	Running time motor note	@ 250°F [121°C]
	Running time fail-safe	<25 s @ 32122°F [050°C]
	Noise level, motor	45 dB(A)
	Noise level, fail-safe	62 dB(A)
	Position indication	Mechanical
Safety data	Degree of protection IEC/EN	IP42
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02 California State Fire Marshal Listing 3210-1593:104
	Quality Standard	ISO 9001
	UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	32122°F [050°C]
	Storage temperature	-40176°F [-4080°C]
	Servicing	maintenance-free
Weight	Weight	1.9 lb [0.70 kg]

Materials

Housing material

UL94-5VA



Footnotes Part no. Clamp side spring-return

FSTF120 US CW

FSTF120.1 US CW (bulk pack) FSTF120.1 CCW CCW (bulk pack)

FSTF120-S US CW CW

FSTF120-S.1 US CW (bulk pack) FSTF120-S.1 CCW CCW (bulk pack) FSTF24-S.1 US CW (bulk pack) † UL File XAPX.E108966

Safety notes



- Screw a conduit fitting into the actuator's bushing. Jacket the actuator's input and output wiring with suitable flexible conduit. Properly terminate the conduit in a suitable junction box.
- Retrofit Safety Note
- Use of the FSTF for replacement of other makes of actuators is limited in damper area. The
 FSLF is preferred for direct coupled applications. The FSTF may be applied for linkage
 applications on dampers 1.5 sq.ft. and smaller at velocities under 2000 fpm.

Product features

Application

The FS series of spring-return actuators are designed for the operation of UL555 and UL555S listed fire/smoke dampers in ventilation and air-conditioning systems.

Operation

The actuator is mounted in its fail safe position with the damper blade(s) typically closed. Upon applying power, the actuator drives the damper to the open position. The internal spring is tensioned at the same time. If the power supply is interrupted, the spring moves the damper back to its fail-safe position.

Typical specification

All smoke and combination fire and smoke dampers shall be provided with Belimo FSTF, FSLF, FSNF, or FSAF series actuators. All substitutions must be approved before submission of bid. Damper and actuator shall have UL555S Listing for 250°F and/or 350°F. Actuator shall have been tested to UL2043 per requirements of IMC 602.2 and NEC 300.22 (c). Where position indication is required -S models with auxiliary switches shall be provided.

Accessories

Electrical accessories	Description	Туре	
	Thermoelectric tripping device, Duct inside temperature 165°F	BAE165 US	
Mechanical accessories	Description	Туре	
	Position indicator	IND-TF	
	for TFB(X)		
	Ball joint suitable for damper crank arm KH8, Multipack 10 pcs.	KG8	
	TFB(X) crankarm with 5/16" slot.	KH-TF US	
	TFB(X) crankarm with 1/4" slot.	KH-TF-1 US	
	Anti-rotation bracket TF/NKQ/AM/NM/LM.	TF-P	
	Wrench 0.32 in and 0.39 in [8 mm and 10 mm]	TOOL-06	
	Angle of rotation limiter, with end stop	ZDB-TF	
	TFB(X) crankarm adaptor kit (T bracket included).	ZG-TF2	
	Mounting kit	ZG-TF3	
	for TFB(X)		
	TFB(X) crankarm adaptor kit (includes ZG-113).	ZG-TF112	
	Weather shield 330x203x152 mm [13x8x6"] (LxBxH)	ZS-100	
	Weather shield 406x213x102 mm [16x8-3/8x4"] (LxWxH)	ZS-150	

Electrical installation



A Provide overload protection and disconnect as required.

🛕 Actuators may be powered in parallel. Power consumption must be observed.




A S4 makes to S6 when actuator is powered open.

Auxiliary switches are for end position indication or interlock control.

<u> A</u> Double insulated.

A Ground present on some models.


Meets cULus requirements without the need of an electrical ground connection.




Parallel Actuator Wiring

Wiring diagrams


AC 120 V

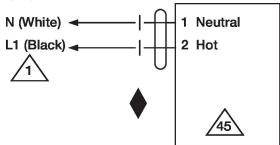


Typical containment damper control wiring

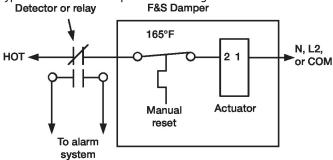


Parallel Actuator Wiring

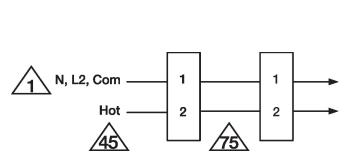

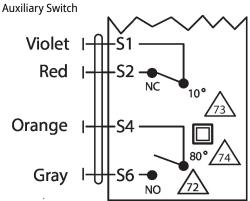



Dimensions

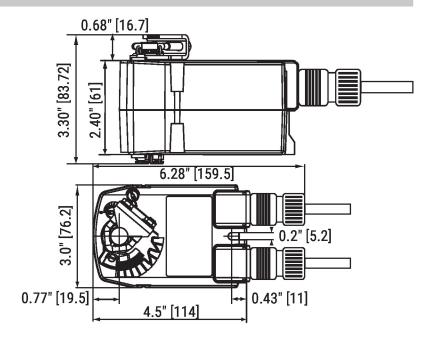

- Standard: Ø 1/4" to 1/2"
- □ 1/4" to 5/16"

SALES CONTACT



www.airmax-hvac.com



080-614-4944, 063-268-8080



@airmax (Line Official)



windcontrol.info@gmail.com



Address
เลขที่ 56/392 หมู่ที่ 12
ตำบลศีรษะจรเข้น้อย
อำเภอบางเสาธง
จังหวัดสมุทรปราการ
10540

